SAA09FY12-006

REV. 8

8/L: 389.00 SYS: 175-TON

> BRIDGE CRANE, VAB

Critical Item:

Motor - Generator Set, Aux Hoist

AUG 2 0 1993

Find Number:

M9-G3

Criticality Category:

System/Area:

175-Ton Bridge Crane/VAB

NASA

09FY12-006

PMN/

K60-0528/

Part No:

SAA No:

: NA

Name:

175-Ton Bridge Crane/VAB

Mfg/

Motor: Imperial Electric/

Drawing/

67-K-L-11348/

Part No:

Type € Form C

Sheet No:

18

Gen: Imperial Electric/

Type D Form C

Function: Consists of a 150 HP motor coupled to a 85 KW DC generator to provide power to the armatures of the two 40 HP auxiliary hoist motors.

Critical Failure Mode/Failure Mode No: No output/09FY12-006.035

Failure Cause: Brush/commutator failure, open/shorted armature winding, structural failure (brush spring, brush yoke, brush rigging), open/shorted field winding.

Failure Effect: Loss of auxiliary hoist motor armature current. Loss of auxiliary hoist motor torque while the command is being given to raise, lower, or float and the brakes are released. The load will drop without regenerative braking. The worst case would be the forward assembly being hoisted, lowered, or floated the failure occurring, and the effect being the forward assembly descending and striking the VAB floor or platform causing possible damage to a vehicle system. Time to effect: seconds.

# **ACCEPTANCE RATIONALE**

# Design:

Motor	Gen
150 HP	85 KW
480 VAC	480 VOC
1750 rpm	1750 rpm
150 A	172 A

This was designed for crane use and selected by the crane manufacturer for this application.

AUG 2 0 1993

## Test:

- QMRSD file VI requires verification of proper performance of hoist operational test appually.
- QMI Q3008, Operating Instructions, requires all crane systems be operated briefly in all speeds to verify satisfactory operation before lifting operations.
- OMI Q3008. Pre-Operation Setup Instructions, requires current (limit checks prior to all
  major lifts of flight hardware (verifies motor, generator, generator field DC input controller,
  float control loop and DC power loop components are operational).

# inspection:

- OMI Q3008 Pre-Operation Setup Instructions require visual and audible check of commutators on motor-generator set generator for proper operation and condition.
- OMI 06003, Maintenance Instructions, requires semiannual inspection of brushes on motor-generator set generators for freedom of movement, wear, clearance, security and cleanliness.
- OMI Q5003, Maintenance instructions, requires semiannual inspection of motor-generator set motors and motor-generator set generators for acceptable condition or damage.
- OMI Q5003, Maintenance Instructions, requires semiannual inspection of armature loop insulation resistance at each motor-generator set.

#### Fallure History:

- The PRACA database was researched and no failure data was found on this component in the critical failure mode.
- The GIDEP failure data interchange system was researched and no failure data was found on this component in the critical failure mode.

## Operational Use:

- Correcting Action:
  - The failures can be recognized via the Selsyn (positions change) that is in view of both operators.
  - When the failure indication is noticed, the operator can stop all crane operations by pressing the E-Stop button.
  - Operators are trained and certified to operate these cranes and know and understand what to do if a failure indication is present.
  - 4) During all critical lifts, there is at least one remote Emergency Stop (E-Stop) operator observing the load lift, and can stop the crane if a failure indication is noticed.
- Timeframe:
  - Estimated operator reaction time is 3 to 10 seconds.

Attachment S0502348L Sheet 59 of 132